 
 
 
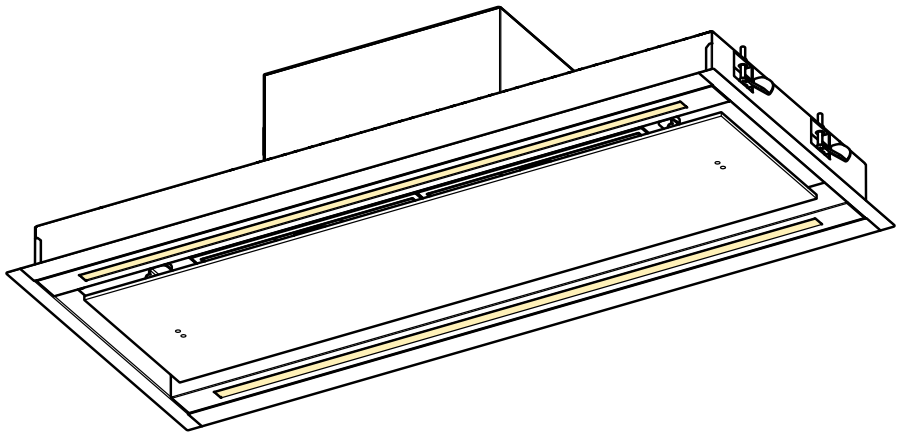 
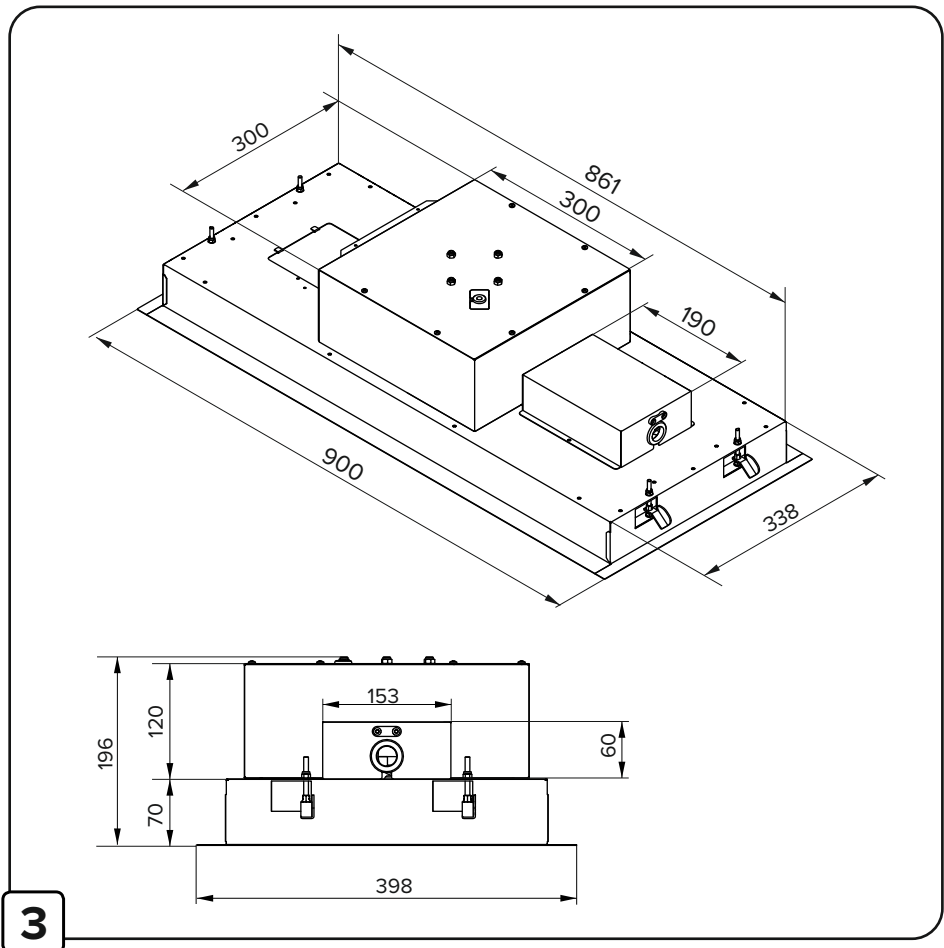 
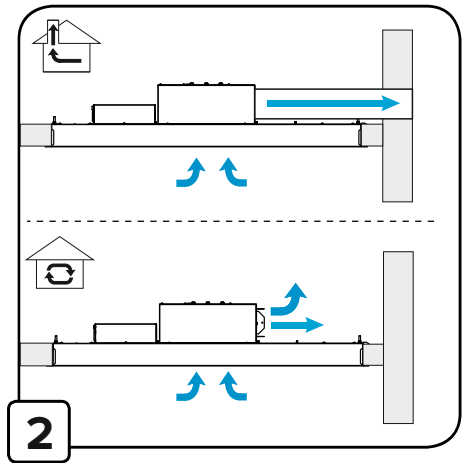 
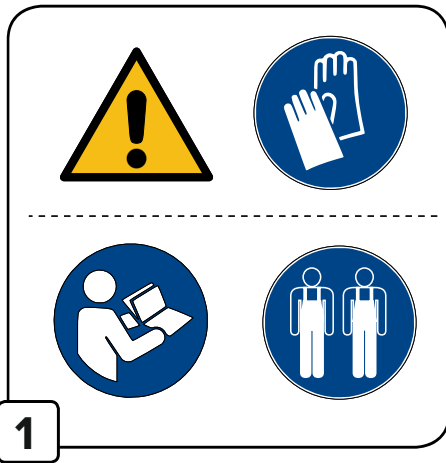 
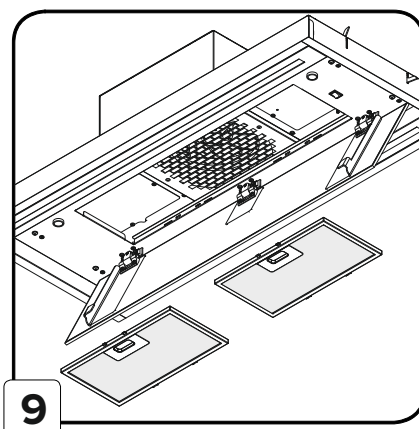 
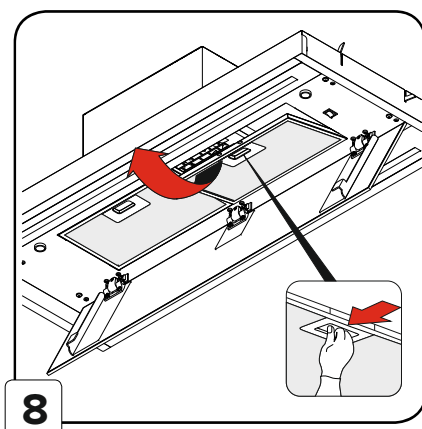 
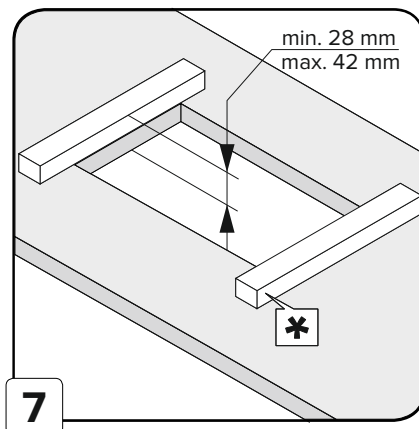 








HOOD INSTALLATION, MAINTENANCE AND USE






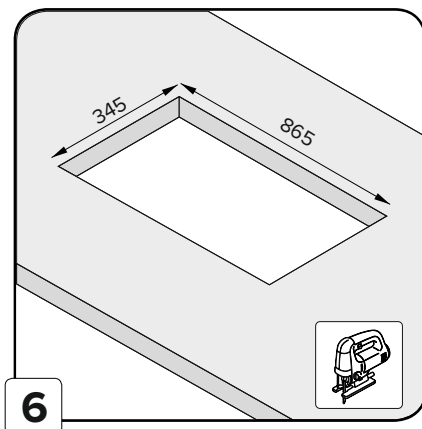


             
 
 
 
 
 
LA-90X40-MIRA-BLK
LA-90X40-MIRA-SS
LA-90X40-MIRA-WHT

 
 
 
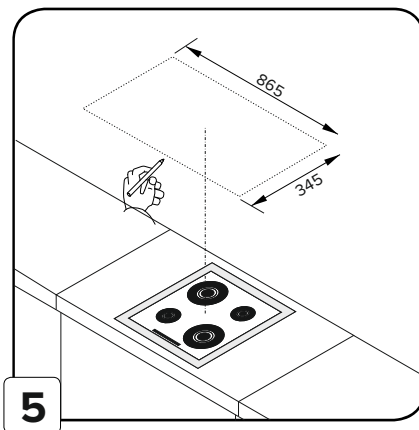 


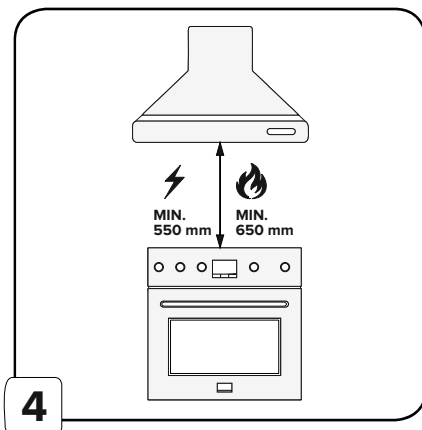

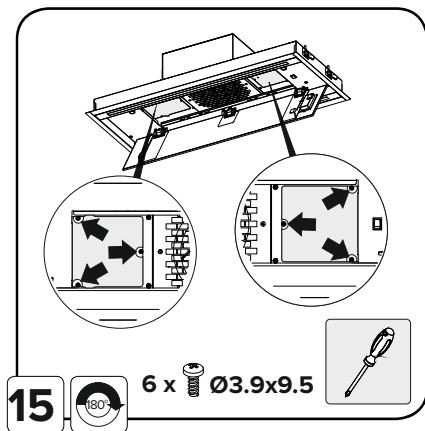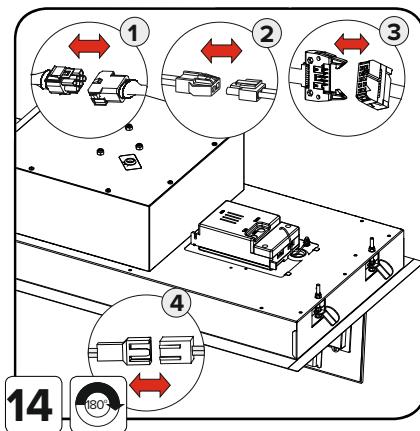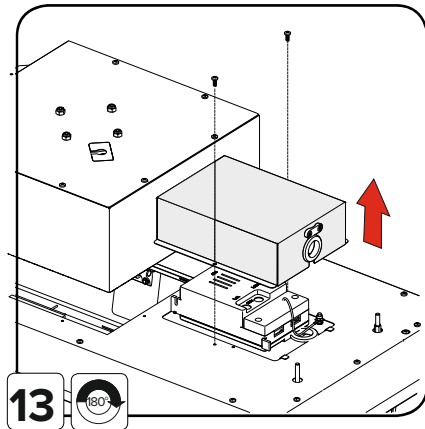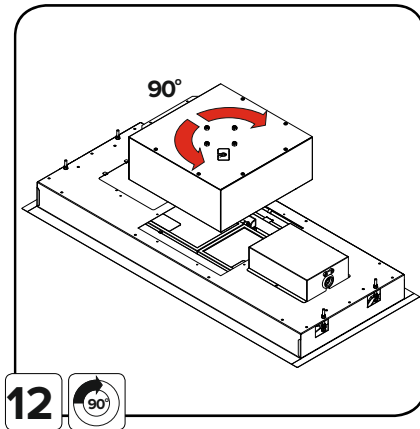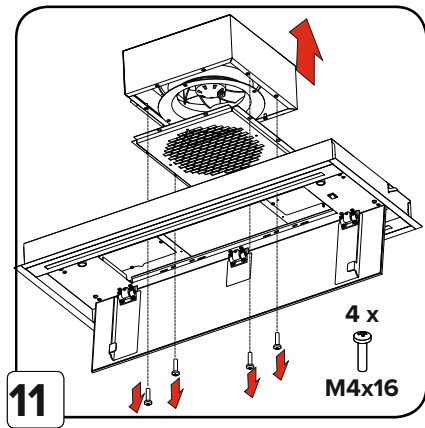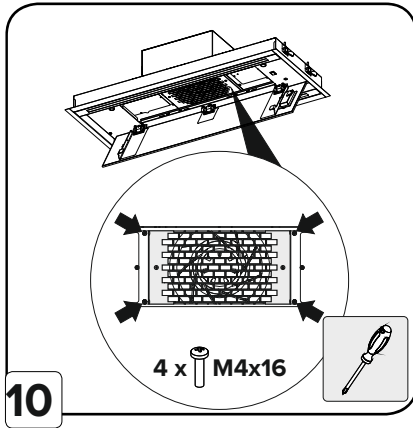

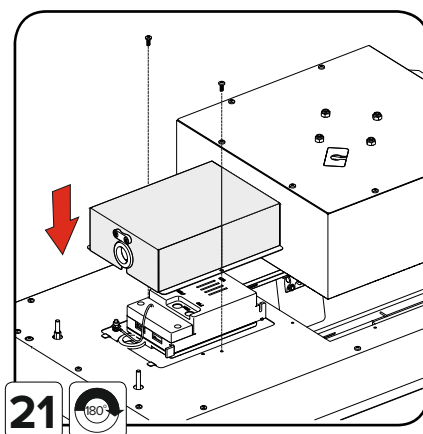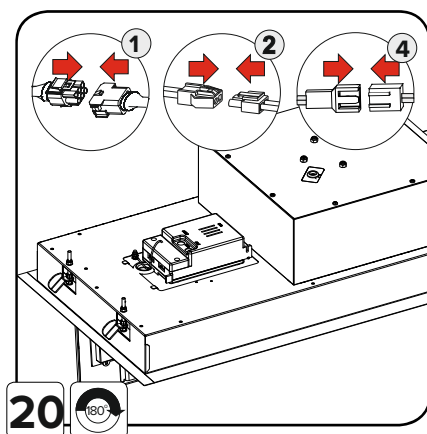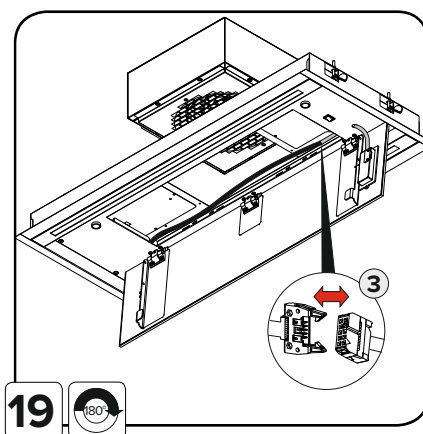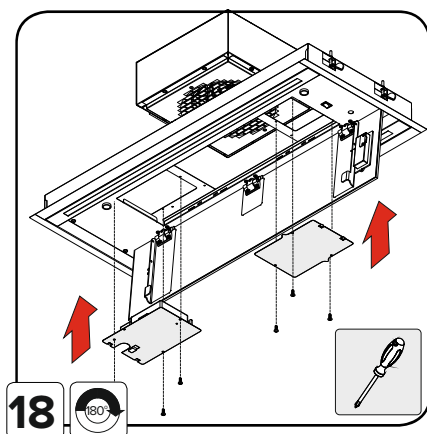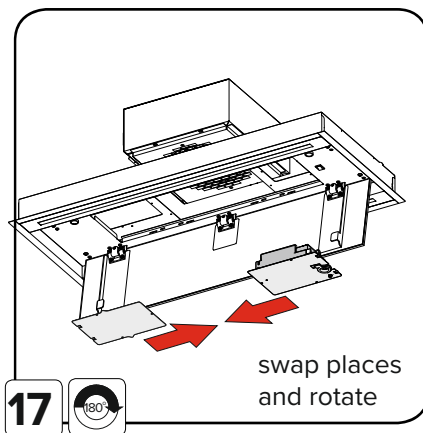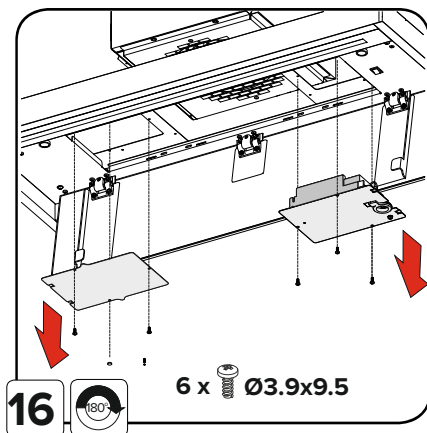

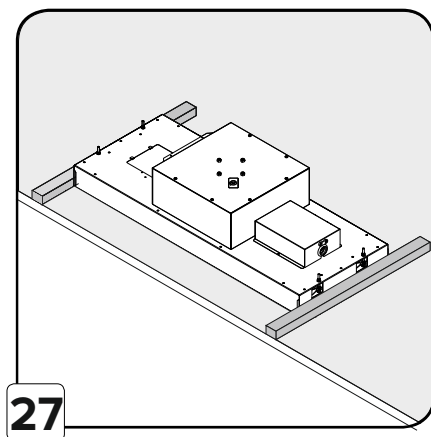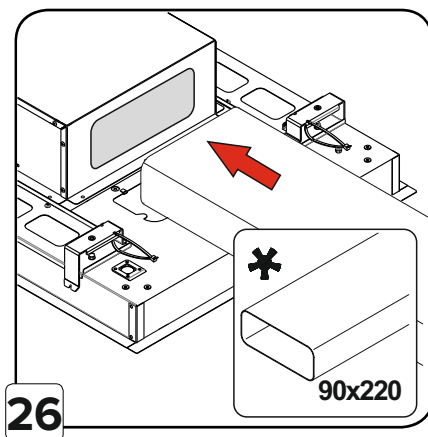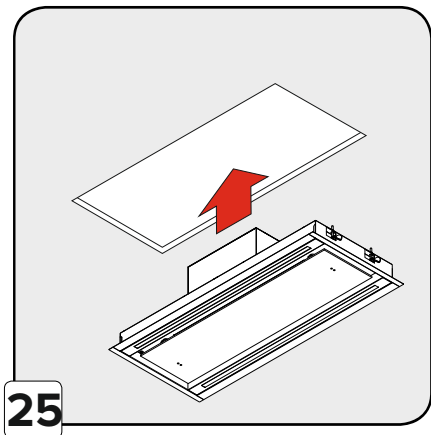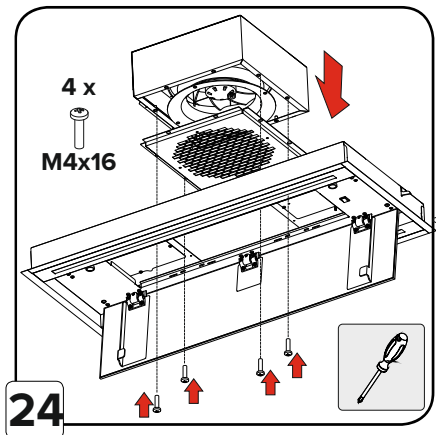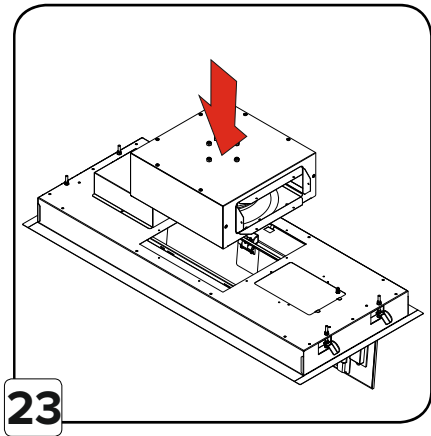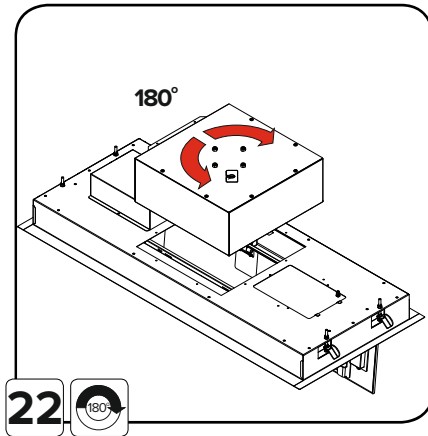

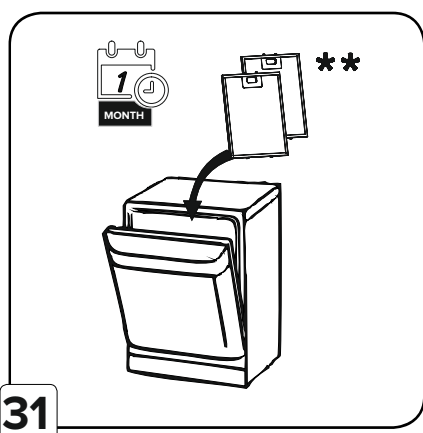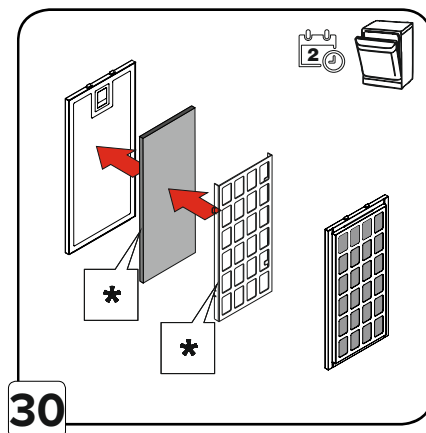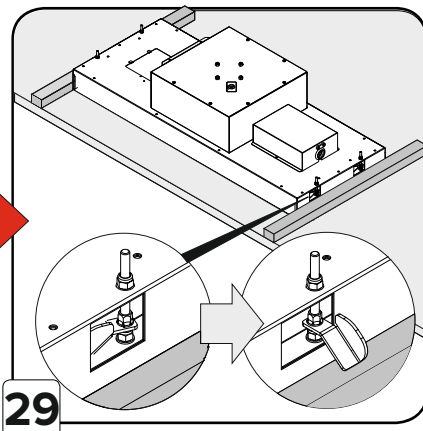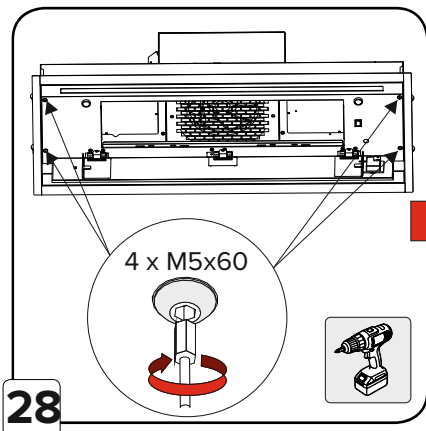

* Note: Elements marked with the symbol „(*)” are only included in selected models, in other cases, they should be purchased separately.

** Remember to clean your grease filters regularly.

Carefully follow the instructions provided in this manual. The manufacturer declines all responsibility for any inconvenience, damage, or fire resulting from failure to comply with these instructions.

The extractor hood has been designed exclusively for domestic use.

The hood can look different to that illustrated in the drawings in this booklet. The instructions for use, maintenance and installation, however, remain the same.

- ! It is important to conserve this booklet for consultation at any moment. In the case of sale, cession or move, make sure it is together with the product.
- ! Read the instructions carefully: there is important information about installation, use and safety.
- ! Do not carry out electrical or mechanical variations on the product or on the discharge conduits.

Note: the elements marked with the symbol “(*)” are optional accessories supplied only with some models or elements to purchase, not supplied.



Caution WARNING!

- ! **Do not connect the appliance to the mains until the installation is fully complete.**
- ! Before any cleaning or maintenance operation, disconnect hood from the mains by removing the plug or disconnecting the mains electrical supply.
- ! Always wear work gloves for all installation and maintenance operations.
- ! This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- ! Children shall not play with the appliance.
- ! Cleaning and user maintenance shall not be made by children without supervision.
- ! This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the appliance.
- ! Never use the hood without effectively mounted grating!

- ! The hood must NEVER be used as a support surface unless specifically indicated.
- ! The premises where the appliance is installed must be sufficiently ventilated, when the kitchen hood is used together with other gas combustion devices or other fuels.
- ! The ducting system for this appliance must not be connected to any existing ventilation system which is being used for any other purpose such as discharging exhaust fumes from appliances burning gas or other fuels.
- ! Do not flambé under the range hood. The flaming of foods beneath the hood itself is severely prohibited. The use of exposed flames is detrimental to the filters and may cause a fire risk, and must therefore be avoided in all circumstances.
- ! Any frying must be done with care in order to make sure that the oil does not overheat and ignite.
- ! Accessible parts of the hood may become hot when used with cooking appliances.
- ! With regards to the technical and safety measures to be adopted for fume discharging it is important to closely follow the regulations provided by the local authorities.
- ! The hood must be regularly cleaned on both the inside and outside (AT LEAST ONCE A MONTH).
- ! This must be completed in accordance with the maintenance instructions provided in this manual.
- ! Failure to follow the instructions provided in this user guide regarding the cleaning of the hood and filters will lead to the risk of fires.
- ! Do not use or leave the hood without the lamp correctly mounted due to the possible risk of electric shocks.
- ! We will not accept any responsibility for any faults, damage or fires caused to the appliance as a result of the non- observance of the instructions included in this manual.

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For further detailed information regarding the process, collection and recycling of this product, please contact the appropriate department of your local authorities or the local department for household waste or the shop where you purchased this product.

USE

The hood is designed to be used either for exhausting or filter version. The models with no suction motor only operate in ducting mode, and must be connected to an external suction device (not supplied).

The connecting instructions are supplied with the peripheral suction unit.



Ducting version

In this case the fumes are conveyed outside of the building by means of a special pipe connected with the connection ring located on top of the hood.

Attention! The exhausting pipe is not supplied and must be purchased apart.

Diameter of the exhausting pipe must be equal to that of the connection ring. In the horizontal runs the exhausting pipe must be slightly slanted (about 10°) and directed upwards to vent the air easily from the room to the outside. Attention! If the hood is supplied with active charcoal filter, then it must be removed.

This cooker hood must be installed using a minimum Ø150 mm round duct or an equivalent 220mm x 90mm rectangular duct. Using ducts and wall outlets with smaller dimensions will reduce suction performance and significantly increase noise levels. Any responsibility in the matter is therefore declined.

- Use a duct of the minimum necessary length.
- Use a duct with as few elbows as possible (maximum elbow angle: 90°).
- Avoid drastic changes in the duct cross-section.
- Use a duct with an as smooth as possible inside.
- The duct must be made of certified material.



Filter version

One active charcoal filter is needed for this and can be obtained from your usual retailer. The filter removes the grease and odours from the extracted air before sending it back into the room through the upper outlet grid.

INSTALLATION

The minimum distance between the supporting surface of the cooking appliance on the hob and the lowest part of the range hood must be:

- at least 65 cm for electric cookers,
- at least 75 cm for gas or mixed cookers.

If the installation instructions for the gas hob specify a greater distance, this distance must be observed.



Electrical connection

The mains power supply must correspond to the rating indicated on the plate situated inside the hood. If provided with a plug connect the hood to a socket in compliance with current regulations and positioned in an accessible area, after installation. If it not fitted with a plug (direct mains connection) or if the plug is not located in an accessible area, after installation, apply a double pole switch in accordance with standards which assures the complete disconnection of the mains under conditions relating to over-current category III, in accordance with installation instructions.

Warning! Before reconnecting the hood to the mains power supply and performing functional checks, verify that the mains cable is correctly assembled.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Mounting

Expansion wall plugs are provided to secure the hood to most types of walls/ceilings. However, a qualified technician must verify suitability of the materials in accordance with the type of wall/ceiling. The wall/ceiling must be strong enough to take the weight of the hood. Do not tile, grout or silicone this appliance to the wall. Surface mounting only.

OPERATION

Use the high suction speed in cases of concentrated kitchen vapours. It is recommended that the cooker hood suction is switched on for 5 minutes prior to cooking and to leave in operation during cooking and for another 15 minutes approximately after terminating cooking.

Key	Single push	Holding for more than 2 seconds
+	Increase fan speed	Light colour adjustment
-	Reduce fan speed	Engine shutdown
⌚	Start timer	-
☀	Light on/off	Dimmer

Dynamic light:

To adjust the light temperature (warm/cold), press and hold button + (1) on the remote control.

0 = the coldest colour

50 = neutral colour

 
100 = the warmest colour.

Timer:

Pressing the timer button on the remote control (3) starts the timer and runs for 10-15 minutes, signaled by the LED indicator light flashing. If the hood is switched off, the timer is also automatically deactivated.

Light dimming:

Holding down light button (4) for more than 2 seconds changes the light intensity.

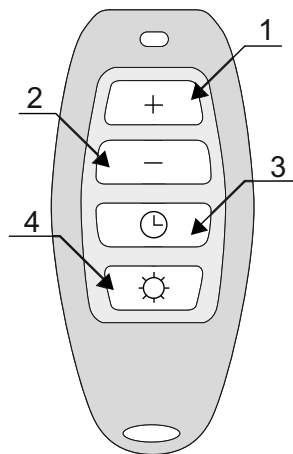

MAINTENANCE



ATTENTION! Before performing any maintenance operation, isolate the hood from the electrical supply by switching off the main power supply and removing the fuse, if applicable. Or if the appliance has been connected through a plug and socket, then the plug must be removed from the socket.

Cleaning

- Clean the cooker hood regularly, both inside and outside.
- Cleaning frequency must be at least the same as grease filter maintenance.
- Use a soft cloth and a neutral liquid detergent for cleaning.
- Always dry the surfaces after cleaning.
- Do not use abrasive agents, harsh detergents, or alcohol.
- Regularly clean or replace the filters in accordance with the manufacturer's instructions.
- Disconnect the power supply before any cleaning or maintenance operations.



IMPORTANT: For this reason, it is strongly recommended to carefully observe the above instructions. The manufacturer declines all responsibility for any damage to the motor or any fire damage caused by improper maintenance or failure to comply with these safety recommendations.

Grease filter

Traps cooking grease particles. This must be cleaned once a month using non aggressive detergents, either by hand or in the dishwasher, which must be set to a low temperature and a short cycle. When washed in a dishwasher, the grease filter may discolour slightly, but this does not affect its filtering capacity.

To remove the grease filter, pull the spring release handle.

Charcoal filter (filter version only)

The charcoal filter absorbs unpleasant odours produced during cooking.

The level of saturation depends on the frequency of use, the type of cooking performed, and the regular cleaning of the grease filters. Under normal operating conditions, the charcoal filter must be replaced at least every 4 months, even if no visible signs of saturation are present. In the case of intensive cooking, more frequent replacement is recommended.

Important: The charcoal filter must not be washed or regenerated. Any attempt to clean or reuse the filter may reduce odour absorption efficiency and impair proper operation of the cooker hood.

Long-Life Filter

WARNING: Unlike traditional charcoal filters, this charcoal filter can be washed and reactivated.

Under normal use of the cooker hood, the filter should be cleaned every two months. The best way to clean the filter is in a dishwasher at the highest possible temperature, using a standard dishwasher detergent.

To prevent food particles or dirt from depositing on the filter during washing, which could cause unpleasant odours, it is recommended to wash the filter separately.

After washing, dry the filter in an oven at 100°C for 10 minutes to reactivate it.

The filter retains its odour absorbing capacity for up to three years, after which it must be replaced.

Replacing lamps

If the lights do not work, first check that the lights have been properly installed. If the lighting still does not work after this check, please contact the service center.

IMPORTANT! Always use the lighting of the same type as installed by the manufacturer. If you are not sure which part to use contact your nearest dealer.



LUXAIRTM
EXTRACTION WITH ATTRACTION