



Spare-Remote-NT-Ceiling Instructions

Remote Control

	Motor ON/OFFPressing this button switches on the motor at the last speed set before it was switched off.
	Pressing this button the lights switches on and off.
	Pressing this button increases the motor speed. When the maximum speed is reached the LED on the button flashes on and off.
	Pressing this button reduces the motor speed. When the minimum speed is reached the LED on the button flashes on and off.

Note:1. commands - selected on the remote control - are displayed on the perimeter of the hood.

2. the remote control is supplied already tuned and ready for use. By necessity, the procedure is easy: turn on the cooker hood and , within one minute , press the  the keys  at least for 2 seconds.