

LA-ANGELO-ISLAND

EN Installation and use
instructions





IT ATTENZIONE! La cappa aspirante è equipaggiata con materiale di fissaggio standard. Chi esegue l'installazione deve assicurarsi di utilizzare dispositivi di fissaggio idonei alle pareti e/o soffitti trovati. La ditta costruttrice declina ogni responsabilità per danni causati da montaggi non eseguiti correttamente.



EN WARNING! The hood is equipped with standard fixing material. The person who is mounting the hood should make sure that the fixing elements are right and suitable for the walls and ceilings he finds. The manufacturer declines any responsibility for damages caused by incorrect mounting.

FR ATTENTION! La hotte est équipée avec des matériaux standard pour le montage. Le monteur doit vérifier que les éléments de fixages sont appropriés aux parois et aux plafonds trouvés. La maison constructrice decline toute responsabilité pour des endommagements causés par de montages qui n'ont pas été faits de manière correcte.




DE ACHTUNG! Die Dunstabzugshaube ist mit Standard Befestigungselementen ausgestattet. Der Monteur muss sicherstellen, daß die vorhandene Befestigungselementen für die gefundenen Decken oder Wände geeignet sind. Die Herstellungsfirma lehnt jegliche Haftung ab, für Schaden die von falscher Montage verursacht worden sind.

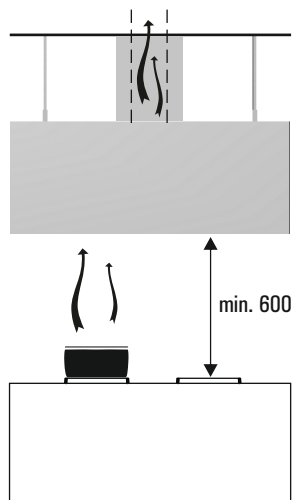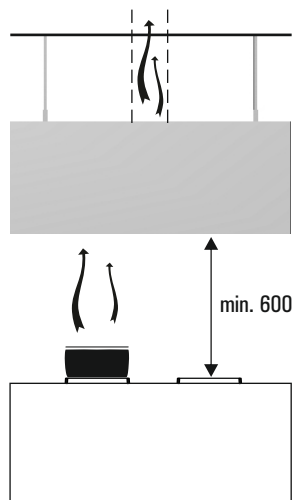


M 1

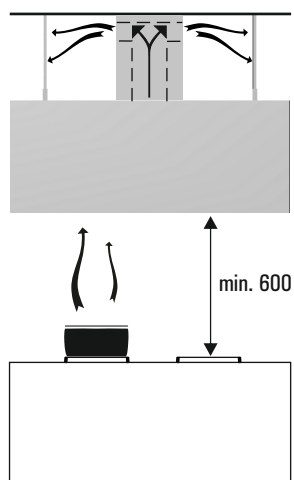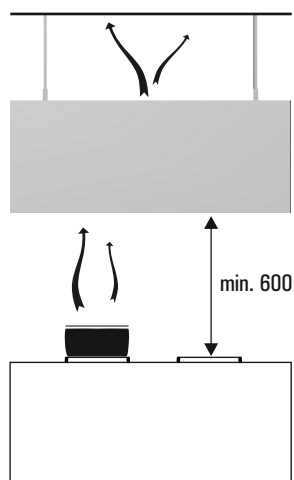



C 1

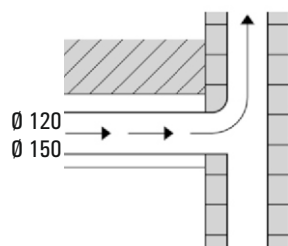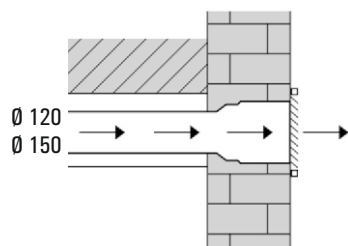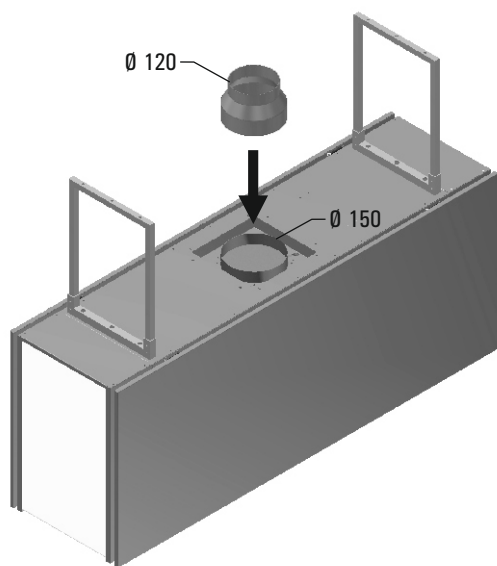


M 2

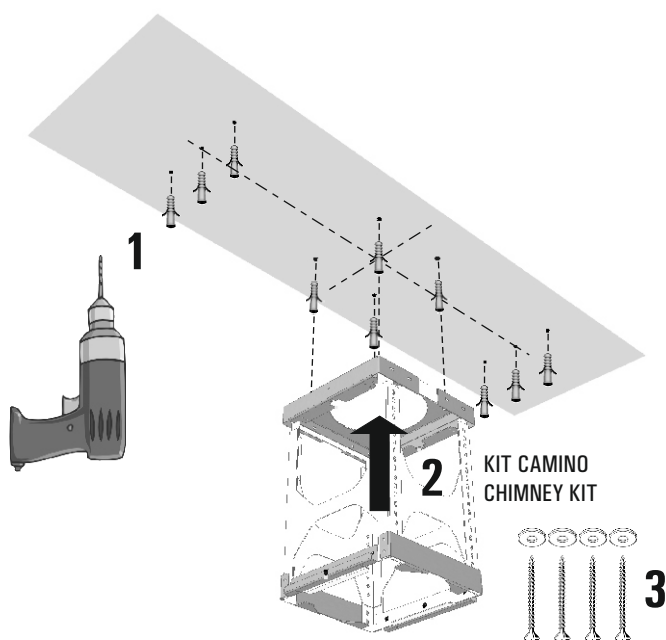


M 3

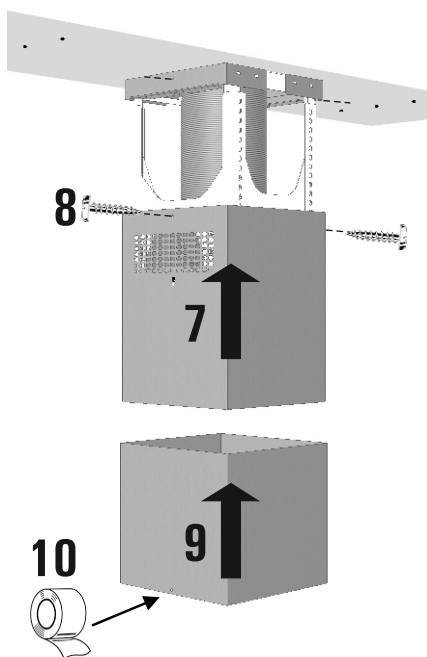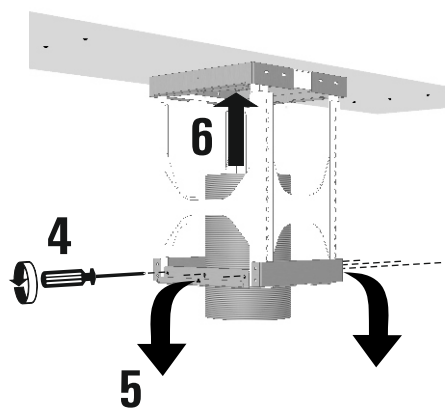


M 4

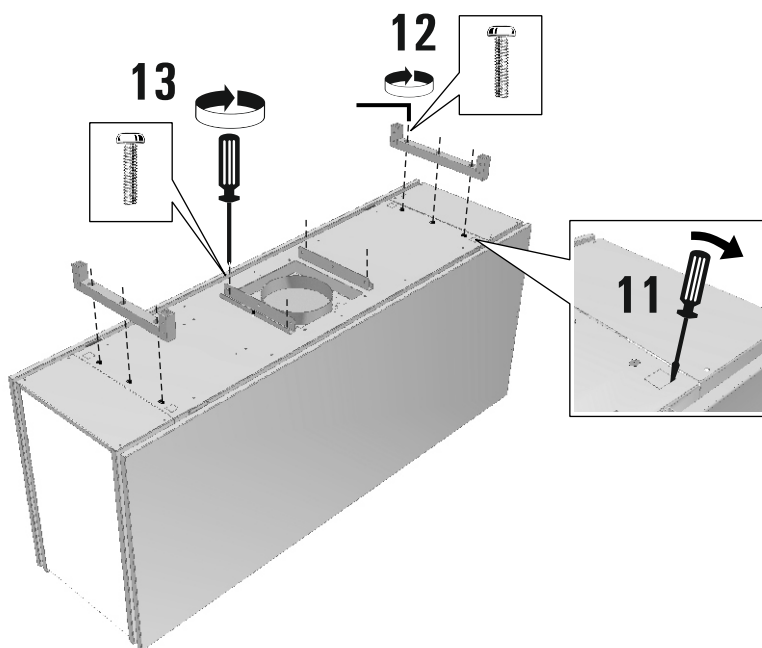


M 5

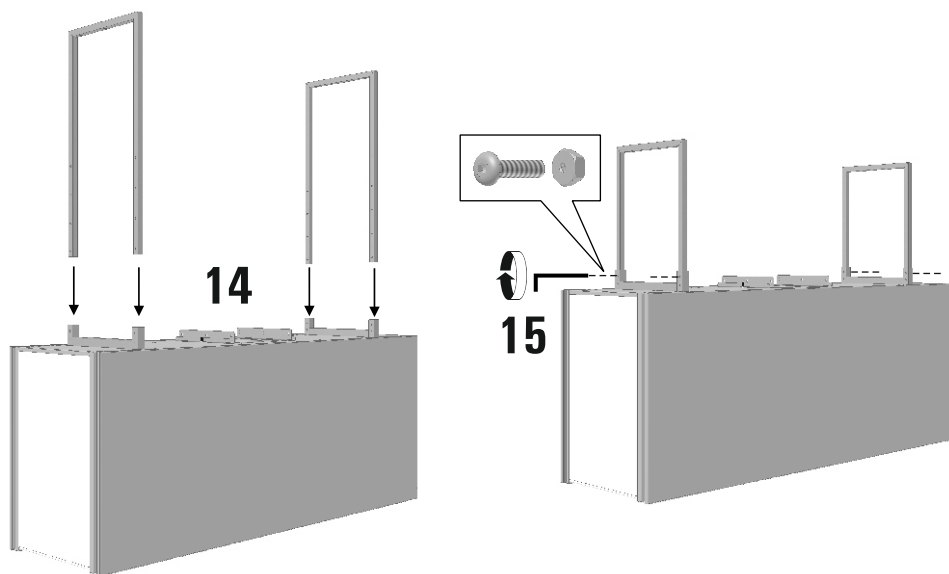

M 6

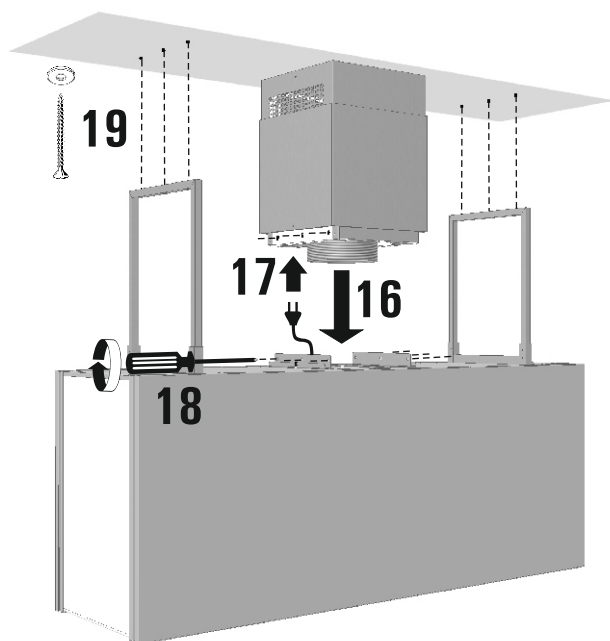


M 7

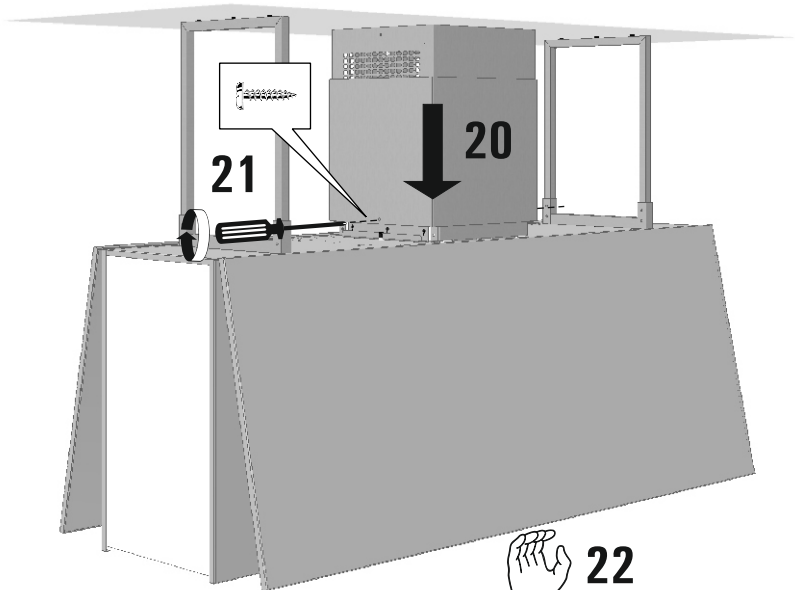

SOLO APERTURA MANUALE
ONLY MANUAL OPENING

M 8

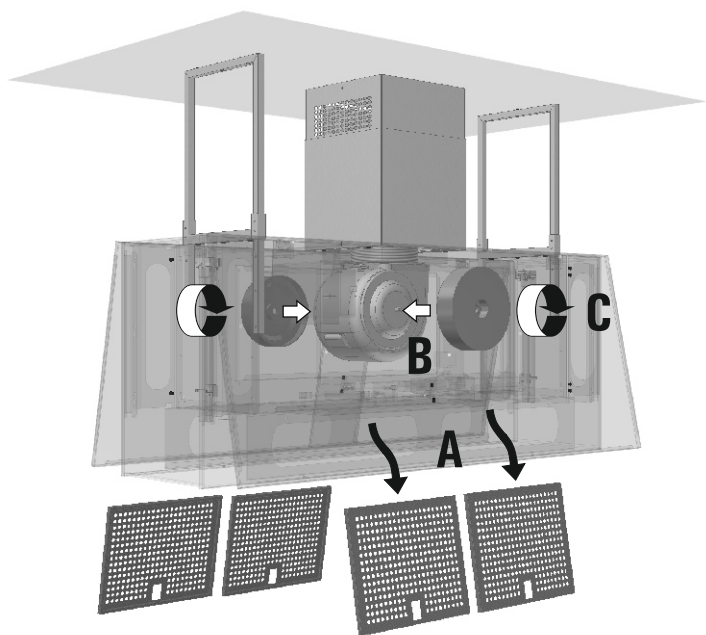

C 2

Instructions for remote control

CONFIGURATION OF THE ELECTRONIC-REMOTE CONTROL:











The remote control is set up by the manufacturer. If the remote control is not controlling the hood please do the following steps.

Press and keep pressed the “+” push button of the remote control and then connect the cooker hood. To confirm that the remote control has been recognized a long beep is issued. If you do not hear the acoustic signal within 30 seconds, please repeat the steps as described.

GREASE FILTER SATURATION ALARM:

Periodically, when it is working, the hood is issuing an acoustic signal to remind to the end-user that it is the time to clean the grease filter.

After clearing the grease filter, please reset the counter by pressing the “F” push button of the remote control or by pressing twice in succession the “0” push button of the controls in less than 1 second.

FUNCTION	CONTROL	REMOTE CONTROL
TO SWITCH THE MOTOR OFF: If the motor is on, by switching this Push Button you switch the motor off.		
LIGHTS: If the lights are off, by switching this Push Button you switch them on. If the lights are on, by switching this Push Button you switch them off.		
TIMER: It sets the motor at the first speed and makes it stop after 10 minutes. When the timer is working the led-point of the display is flashing showing the number 1.		
SWITCH ON-INCREASE OF THE MOTOR SPEEDS: When the motor is off, by switching this Push Button you switch it on and each time you press you increase the speed of 1 step. The highest Speed shown by the “P” letter in the display is automatically converted into the second speed after 10 minutes.		
REDUCTION OF THE MOTOR SPEEDS-SWITCH OFF: Each time you press, you reduce the speed of the motor with the following sequence: P→3→2→1→0.		
OPENING AND CLOSING THE DOOR PANELS (only WD 81 M opening of the doors with motor): If the DOOR PANELS are open, by switching this Push Button you close them. If the DOOR PANELS are closed, by switching this Push button you open them		



Register Your Warranty At www.Luxarihoods.com
Free 7 Year Parts & Labour Warranty (Subject To Registration)