

How To Change A Screw Light Bulb



- Remove the metal grease filters from your hood to expose the light fitting located at the back of your hood, (this only applies to standard hoods)



- Twist the bulb anticlockwise to remove, replace with a 20/40 w max screw bulb



- Bulbs are NOT covered by warranty but can be purchased at www.Luxairhoods.com