

How To Change Screw Light Bulb



Screw Bulbs

1. Remove the metal grease filters from your hood to expose the light fitting located at the back of your hood, (this only applies to standard hoods)



2. Twist the bulb anticlockwise to remove, replace with a 20/40 w max screw bulb.



Bulbs are not covered by warranty and can be purchased from the Luxair Website www.luxairhoods.com